

After locating the subject you want, load the appropriate file, then use the thumbnails on the left to move quickly to the page you want. When you click on the thumbnail, the chapter-page number is on the bottom of the page. Return to download page for other files.

## CONTENTS

<b>CHAPTER 1 - GENERAL DESCRIPTION OF THE TURRET</b>		Page	
Purpose . . . . .	1-1	Sighting . . . . .	2-25
Ship class . . . . .	1-1	Range estimating . . . . .	2-26
Emplacement data . . . . .	1-1	Gun casualty operation . . . . .	2-26
Turret arrangements and differences . . . . .	1-1	Misfire operation . . . . .	2-26
Components . . . . .	1-1	Manual projectile extraction . . . . .	2-29
Structural assembly . . . . .	1-3	Securing operations . . . . .	2-29
Ordnance installations . . . . .	1-9	Stopping equipment . . . . .	2-29
Ordnance designs . . . . .	1-12	Conditioning for stowing . . . . .	2-30
Auxiliary installations . . . . .	1-18	Securing . . . . .	2-31
Communications . . . . .	1-23	Stowing ammunition . . . . .	2-33
Illumination . . . . .	1-27	Stowage procedure . . . . .	2-33
Gas ejector supply . . . . .	1-29		
<b>CHAPTER 2 - TURRET OPERATION</b>			
Introduction . . . . .	2-1	<b>CHAPTER 3 - GUN ASSEMBLIES</b>	
Station activities and turret control methods	2-1	General description . . . . .	3-1
Firing cycle . . . . .	2-1	Components . . . . .	3-2
Personnel organization . . . . .	2-1	Assembly arrangement . . . . .	3-2
Crew stations . . . . .	2-3	Assembly difference . . . . .	3-2
Personnel duties . . . . .	2-3	Data . . . . .	3-3
Turret officer . . . . .	2-3	Detail description . . . . .	3-4
Turret captain . . . . .	2-3	Gun . . . . .	3-4
Computer operators . . . . .	2-3	Breech mechanism . . . . .	3-5
Talker . . . . .	2-4	Salvo latch . . . . .	3-12
Rangefinder operator . . . . .	2-4	Firing lock . . . . .	3-12
Rangefinder pointer . . . . .	2-5	Gas ejector . . . . .	3-15
Rangefinder trainer . . . . .	2-5	Yoke . . . . .	3-16
Sight trainers (right and left) . . . . .	2-5	Operation . . . . .	3-17
Sight pointer (right and left) . . . . .	2-5	General . . . . .	3-17
Sight setters (right and left) . . . . .	2-6	Firing operation . . . . .	3-17
Gun captains . . . . .	2-6	Non-firing operation . . . . .	3-17A
Cradle operator . . . . .	2-7	Instructions . . . . .	3-17L
Rammer operator . . . . .	2-7	General maintenance . . . . .	3-17L
Primermen . . . . .	2-8	Preservation and service care . . . . .	3-18
Powder hoist operators . . . . .	2-8	Operating and maintenance instructions . . . . .	3-20
Gun layers . . . . .	2-8	Backing out precautions . . . . .	3-21
Gun train operator . . . . .	2-8	Adjustments . . . . .	3-21
Projectile hoist operators (each level) . . . . .	2-9	Disassembly and assembly . . . . .	3-22
Projectile ring operators (each level) . . . . .	2-9	General instructions . . . . .	3-22
Shellmen (each level) . . . . .	2-10	Regunning procedure . . . . .	3-22
Electricians (each level) . . . . .	2-11	Breech mechanism . . . . .	3-24
Petty officer in charge (projectile handling deck) . . . . .	2-11	Firing lock . . . . .	3-25
Lower powder door operators . . . . .	2-12	Mason valve . . . . .	3-25
Powdermen . . . . .	2-13	Foster valve . . . . .	3-25
Petty officer in charge (powder handling room) . . . . .	2-13		
Preparation for operation . . . . .	2-14	<b>CHAPTER 4 - SLIDES</b>	
Manning stations . . . . .	2-14	General description . . . . .	4-1
Starting operations . . . . .	2-14	Components . . . . .	4-2
Ordnance equipment preparations and starting operations . . . . .	2-16	Design features . . . . .	4-2
Firing operations . . . . .	2-21	Design differences . . . . .	4-2
First round . . . . .	2-21	Access arrangements . . . . .	4-2
Gun laying, firing . . . . .	2-22	Detailed description . . . . .	4-2
Loading . . . . .	2-25	Deck lug . . . . .	4-2
		Slide . . . . .	4-4
		Operation . . . . .	4-10A
		Slide operation when gun is fired . . . . .	4-10A
		Instructions . . . . .	4-10A
		General instructions . . . . .	4-10A
		General slide servicing instructions . . . . .	4-12
		Servicing instructions for slide recoil and counterrecoil systems . . . . .	4-12
		General note . . . . .	4-15

Page	Page		
Routine tests of the slide .....	4-15	Instructions .....	6-23
Adjustments .....	4-16	General instructions .....	6-23
Disassembly and assembly .....	4-16	Operating precautions .....	6-23
General instructions .....	4-16	General servicing instructions .....	6-24
<b>CHAPTER 5 - ELEVATING GEAR</b>			
General description .....	5-1	Operating trouble diagnosis .....	6-26
Design differences .....	5-1	Adjustments .....	6-27
Power drive .....	5-2	General .....	6-27
Oscillating bearing assembly .....	5-10	Main relief valve .....	6-27
Elevating gear controls .....	5-10	Adjustment of control screw limit .....	6-28
Receiver-regulator .....	5-14	Adjustment of transmission limit stops .....	6-28
Operation .....	5-22	Adjustment of constant horsepower device .....	6-29
General - hand and automatic control ..	5-22	B-end synchronization .....	6-29
Starting .....	5-22	Adjustment of B-end brake .....	6-29
Stopping .....	5-22	Adjustment of synchro electrical zero ..	6-30
Hand control, servo operation .....	5-22	Zeroing the parallax computer .....	6-31
Receiver-regulator control, servo operation .....	5-26	Setting the checking dials .....	6-31
Instructions .....	5-28	Setting the synchros .....	6-31
General instructions .....	5-28	Zeroing the valve block .....	6-31
Operating precautions .....	5-28	Replacement installation of receiver-regulator initial settings and adjustments .....	6-32
General servicing instruction .....	5-29	Disassembly and assembly .....	6-34
Operating trouble diagnosis .....	5-30	General .....	6-34
Adjustments .....	5-34	Replacement of synchros .....	6-36
Disassembly and assembly .....	5-41	Removal of synchro cranks .....	6-36
Disassembly of the speed reducer .....	5-41	Disassembly of the receiver-regulator main block assembly .....	6-36
Disassembly of the A-end pump .....	5-41	Receiver-regulator gear train .....	6-36
Removal and disassembly of the servo piston .....	5-41	Receiver-regulator pressure reducer ..	6-37
Disassembly and assembly of the control mechanism .....	5-42	Receiver-regulator valves .....	6-37
Disassembly and assembly of the super-charge and servo pumps .....	5-42	<b>CHAPTER 7 - PROJECTILE RINGS</b>	
Disassembly and assembly of the B-end .....	5-42	General description .....	7-1
Removal and replacement of synchros ..	5-42	Turret stowage .....	7-1
Removal and replacement of valves in the receiver-regulator .....	5-43	Stowing projectiles .....	7-2
Removal and replacement of the hydraulic vibrators .....	5-43	Stowage handling .....	7-2
Replacement limits of parts reassembled .....	5-43	Serving the rings and securing projectiles .....	7-3
<b>CHAPTER 6 - TRAINING GEAR</b>			
General description .....	6-1	Projectile stowage quantities .....	7-4
Components .....	6-1	Projectile stowage data .....	7-4
Component locations .....	6-1	Power drive .....	7-4
Functional arrangements .....	6-1	Detail description .....	7-6
Design data .....	6-3	Power drive .....	7-6
Detail description .....	6-3	Projectile rings .....	7-14
Power drive .....	6-3	Projectile ring controls and interlocks ..	7-17
Training worm, wormwheel, and pinion assembly .....	6-8	Operation .....	7-18
Training gear controls .....	6-9	General .....	7-18
Receiver-regulator .....	6-11	Starting .....	7-18
Firing stop mechanism .....	6-19	Stopping .....	7-18
Operation .....	6-20	Circuit operations .....	7-24
General - hand and automatic control ..	6-20	Instructions .....	7-26
Starting .....	6-21	General instructions .....	7-26
Stopping .....	6-21	General servicing instructions .....	7-26
Hand control, servo operation .....	6-21	Operating precautions .....	7-27
Receiver-regulator control, servo operation .....	6-22	Adjustments .....	7-27
		Operating trouble diagnosis .....	7-29
		Disassembly and assembly .....	7-31
		General instructions .....	7-31
		A-end disassembly .....	7-31
		A-end assembly .....	7-34
		B-end disassembly .....	7-34
		B-end assembly .....	7-35

Page	Page		
Auxiliary pump disassembly.....	7-35	Removal and disassembly of hydraulic cylinder.....	9-36
Auxiliary pump assembly.....	7-35	<b>CHAPTER 10 - RAMMER</b>	
<b>CHAPTER 8 - PARBUCKLING GEAR</b>			
General description .....	8-1	General description .....	10-1
Purpose .....	8-1	Type .....	10-1
Type .....	8-1	Design features .....	10-1
Components .....	8-1	Components .....	10-1
Locations .....	8-2	Component locations .....	10-1
Mounting arrangements .....	8-2	Functional arrangements .....	10-2
Design features .....	8-2	Design differences .....	10-2
Arrangement of drive shaft system .....	8-2	Performance data .....	10-2
Number of gypsy heads .....	8-3	Detailed description .....	10-2
Slip clutch .....	8-3	Power drive .....	10-2
Data .....	8-3	A-end assembly .....	10-3
Detailed description .....	8-3	Main valves .....	10-4
Power drive .....	8-3	Auxiliary pump (supercharge pump) .....	10-5
Controls .....	8-6	B-end (hydraulic motor) .....	10-6
Operation .....	8-6	Rammer .....	10-9
General .....	8-6	Controls .....	10-10
Parbuckling .....	8-6	Operation .....	10-15
Projectile ring movement .....	8-7	General .....	10-15
Instructions .....	8-7	Starting .....	10-15
General instructions .....	8-7	Stopping .....	10-15
Operating precautions .....	8-7	Circuit operations .....	10-15
Adjustments .....	8-8	Instructions .....	10-19
Disassembly and assembly .....	8-8	General maintenance .....	10-19
General .....	8-8	Operating precautions .....	10-20
Disassembly of gear box units .....	8-8	Hydraulic equipment servicing .....	10-21
<b>CHAPTER 9 - PROJECTILE HOIST</b>			
General description .....	9-1	Operating trouble diagnosis .....	10-21
Type .....	9-1	Adjustments .....	10-22
Purpose .....	9-1	Disassembly and assembly .....	10-23
Components .....	9-1	General instructions .....	10-23
Component locations .....	9-1	Rammer chain removal .....	10-23
Component locations .....	9-1	Disassembly of the A-end .....	10-24
Functional arrangement .....	9-1	Assembly of the A-end .....	10-24
Design differences .....	9-1	Disassembly of the B-end .....	10-25
Design data .....	9-3	Assembly of the B-end .....	10-25
Detailed description .....	9-3	<b>CHAPTER 11 - POWDER HOIST</b>	
Power drive .....	9-3	General description .....	11-1
Hoist components .....	9-9	Turret installation .....	11-1
Cradle assembly components .....	9-12	Components .....	11-1
Hoist reversal system .....	9-12A	Component location .....	11-1
Controls and interlocks .....	9-14	Functional arrangements .....	11-1
Operation .....	9-19	Design features .....	11-1
General .....	9-19	Design differences .....	11-3
Starting .....	9-20A	Data .....	11-3
Stopping .....	9-20A	Detailed description .....	11-3
Serving projectiles .....	9-21	Power drive .....	11-3
Filling hoist .....	9-21	Powder hoist trunk .....	11-7
Hydraulic action .....	9-21	Trunk lower door assembly .....	11-8
Hoist action .....	9-25	Trunk upper door assembly .....	11-9
Instructions .....	9-27	Powder car .....	11-10 A
General maintenance .....	9-27	Controls and interlocks .....	11-13
Installation instructions .....	9-30	Operation .....	11-17
Operating precautions .....	9-30	General .....	11-17
Hydraulic equipment servicing .....	9-30	Starting .....	11-17
Operating trouble diagnosis .....	9-31	Stopping .....	11-17
Adjustments .....	9-32	Servo electrical control .....	11-17
Disassembly and assembly .....	9-36	Servo mechanical control .....	11-19
General instructions .....	9-36		
Main pump .....	9-36		

Page	Page	
Interlock system operation . . . . .	11-20	<b>CHAPTER 14 - RANGEFINDER MOUNT ASSEMBLIES</b>
Manual mechanical control . . . . .	11-23	
Failure in the hydraulic system . . . . .	11-25	
Oil filter removal during system operation . . . . .	11-25	
Buffers and overtravel action . . . . .	11-25	
System vents . . . . .	11-25	
<b>Instructions . . . . .</b>	<b>11-25</b>	
General instructions . . . . .	11-25	
Operating precautions . . . . .	11-25	
Speed limitations during manual control operation . . . . .	11-25	
General servicing instructions . . . . .	11-25	
Operating trouble diagnosis . . . . .	11-26	
Adjustments . . . . .	11-29	
<b>Disassembly and assembly . . . . .</b>	<b>11-36</b>	
General instructions . . . . .	11-36	
A-end group . . . . .	11-37	
B-end group . . . . .	11-42	
Valve assemblies and control linkage . . . . .	11-46	
Piping disassembly and installation . . . . .	11-48	
<b>Method of changing power equipment from right hand to left hand . . . . .</b>	<b>11-48</b>	
General . . . . .	11-48	
B-end changeover . . . . .	11-48	
A-end changeover . . . . .	11-49	
Control linkage changeover . . . . .	11-49	
Safety car stop device cylinder changeover . . . . .	11-49	
<b>CHAPTER 12 - FIRE CONTROL</b>		
Ship fire control system . . . . .	12-1	
<b>General description . . . . .</b>	<b>12-1</b>	
Turret fire control circuits . . . . .	12-1	
Turret fire control station equipment . . . . .	12-6	
<b>CHAPTER 13 - SIGHT ASSEMBLIES</b>		
<b>General description . . . . .</b>	<b>13-1</b>	
Type . . . . .	13-1	
General arrangement of sight stations and components . . . . .	13-1	
Functional arrangements . . . . .	13-2	
Local control instruments . . . . .	13-3	
<b>Detailed description . . . . .</b>	<b>13-3</b>	
Sight . . . . .	13-3	
Instruments . . . . .	13-8	
<b>Operation . . . . .</b>	<b>13-10</b>	
Personnel, stations . . . . .	13-10	
LOCAL control . . . . .	13-10	
PRIMARY and SECONDARY control sight operation . . . . .	13-10	
Alternative sight operations . . . . .	13-10	
Operation of the sight station differentials . . . . .	13-10	
<b>Instructions . . . . .</b>	<b>13-10</b>	
General maintenance . . . . .	13-10	
Operating precautions . . . . .	13-11	
Installation care . . . . .	13-11	
Adjustments . . . . .	13-12	
<b>Disassembly and assembly . . . . .</b>	<b>13-15</b>	
General instructions . . . . .	13-15	
<b>CHAPTER 15 - TURRET ELECTRICAL INSTALLATIONS</b>		
<b>General description . . . . .</b>	<b>15-1</b>	
Electrical systems . . . . .	15-1	
Turret structural arrangements . . . . .	15-1	
<b>Detailed description . . . . .</b>	<b>15-3</b>	
Power system . . . . .	15-3	
Fire control system . . . . .	15-17	
Safety interlock arrangement . . . . .	15-28B	
Interior communications system . . . . .	15-37	
Lighting system . . . . .	15-45	
Magazine sprinkling system (electric) . . . . .	15-45	
Turret ventilating equipment . . . . .	15-48	
<b>Instructions . . . . .</b>	<b>15-50</b>	
General . . . . .	15-50	
Trouble analysis . . . . .	15-50	
Maintenance . . . . .	15-51	
<b>CHAPTER 16 - TURRET AUXILIARY INSTALLATIONS</b>		
<b>Introduction . . . . .</b>	<b>16-1</b>	
General . . . . .	16-1	
<b>Description . . . . .</b>	<b>16-1</b>	
Power supply . . . . .	16-1	
Illumination supply . . . . .	16-1	
Ventilating system . . . . .	16-1	
Sprinkling system . . . . .	16-4	
<b>CHAPTER 17 - HYDRAULIC EQUIPMENT INSTRUCTIONS</b>		
<b>General . . . . .</b>	<b>17-1</b>	
Purpose of instructions . . . . .	17-1	
Installation instructions . . . . .	17-1	
Initial installation . . . . .	17-1	
Overhauled installation . . . . .	17-1	
Special fitting, cleanliness . . . . .	17-1	
Spare hydraulic equipment . . . . .	17-2	
Partial installations . . . . .	17-2	
Threading pipe . . . . .	17-2	

Page	Page
Flanged pipe fitting . . . . .	17-2
Flared pipe fitting . . . . .	17-2
Cleaning pipe . . . . .	17-3
Making pipe connections . . . . .	17-3
Pipe connection test . . . . .	17-4
Shaping and securing pipes . . . . .	17-4
Filling hydraulic drive systems . . . . .	17-4
Procedure for initial period of operation . . . . .	17-4
Maintenance instructions . . . . .	17-5
General . . . . .	17-5
Daily exercise . . . . .	17-5
Hydraulic fluid . . . . .	17-5
Hydraulic system service maintenance . . . . .	17-6
Precautions for hydraulic system dismantling and servicing . . . . .	17-7
<b>CHAPTER 18 - LUBRICATION INSTRUCTIONS</b>	
General instructions and information . . . . .	18-1
Turret lubrication facilities . . . . .	18-1
Selection of lubricants . . . . .	18-1
Adulterants . . . . .	18-1
Principles of good lubricating practice . . . . .	18-2
Function . . . . .	18-2
Frequency . . . . .	18-2
Distribution . . . . .	18-2
Lubrication of antifriction bearings . . . . .	18-2
Excessive lubrication . . . . .	18-3
Cleanliness . . . . .	18-3
Preservation . . . . .	18-3
Substitution . . . . .	18-3
Temperature variations . . . . .	18-3
Detailed lubrication features . . . . .	18-4
<b>CHAPTER 19 - TOOLS AND ACCESSORIES</b>	
General description . . . . .	19-1
Special equipment . . . . .	19-1
Standard equipment . . . . .	19-1
Identities . . . . .	19-1
Types . . . . .	19-1
Instructions . . . . .	19-1
General . . . . .	19-1
Operating precautions . . . . .	19-2
Storing . . . . .	19-2
List of tools and accessories . . . . .	19-3
<b>APPENDIX 1 - GENERAL TURRET DATA</b>	
Ship data . . . . .	A1-1
Main battery data . . . . .	A1-1
Main battery director positions . . . . .	A1-1
<b>APPENDIX 2 - ORDNANCE DATA</b>	
Internal ballistics . . . . .	A2-1
External ballistics . . . . .	A2-1
Range tables . . . . .	A2-1
Weight pounds, each turret . . . . .	A2-1
Ammunition data . . . . .	A2-1
Projectile stowage . . . . .	A2-1
Gun data . . . . .	A2-1
<b>APPENDIX 3 - INDEX OF ASSEMBLIES</b>	
16-inch Turret Assembly No. 84 . . . . .	A3-1
16-inch Turret Assembly No. 85 . . . . .	A3-1
16-inch Turret Assembly No. 86 . . . . .	A3-2
16-inch Turret Assembly No. 87 . . . . .	A3-2
16-inch Turret Assembly No. 88 . . . . .	A3-3
16-inch Turret Assembly No. 89 . . . . .	A3-3
16-inch Turret Assembly No. 90 . . . . .	A3-4
16-inch Turret Assembly No. 91 . . . . .	A3-4
16-inch Turret Assembly No. 92 . . . . .	A3-5
16-inch Turret Assembly No. 93 . . . . .	A3-5
16-inch Turret Assembly No. 94 . . . . .	A3-6
16-inch Turret Assembly No. 95 . . . . .	A3-6
<b>APPENDIX 4 - SAFETY PRECAUTIONS</b>	
Extracts from NavOrd Instructions 5100.1	A4-1
Service of guns, including ammunition supply . . . . .	A4-1
Turret general precautions . . . . .	A4-4
Ordnance equipment precautions . . . . .	A4-4
Preparation precautions . . . . .	A4-5
Firing precautions . . . . .	A4-5
Misfire precautions . . . . .	A4-5
Stowing precautions . . . . .	A4-5
Miscellaneous precautions . . . . .	A4-5
INDEX . . . . .	Index 1